

# CANMORE

## GOLF GPS USER GUIDE



### WARNING

---

 
Use ONLY USB chargers with **5V 1A** output that comply with the CE standard. Higher charging input will damage the battery and will void the warranty.

<http://www.canmore-sport.com/>

82-PG12-01010

# Magnetic Accessory

The device is equipped with a powerful magnet in the rear center of its housing. It allows the device to be securely attached to a golf cart bar, any metal surface or attached to the belt by clip.

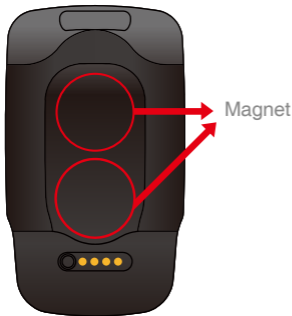

Clip for attaching the unit to belt or golf bag


Extra magnet for attaching the unit to a golf cart bar tightly.




## **WARNING**

 - Keep out of reach of children. If swallowed, get medical help or
1. contact a Poison Control Center right away.

## [GPS Locating Tips] :

- Receive a GPS signal in an open space, and refer to the following instructions.
- GPS receiver is located on top of the device.  
Do NOT cover the receiver and face it towards the sky.
- The first positioning will take 2~3 minutes.  
Subsequent positioning will take 1~2 minutes.
- If you are unable to complete GPS positioning, press  to exit. Move to an open space and try again.

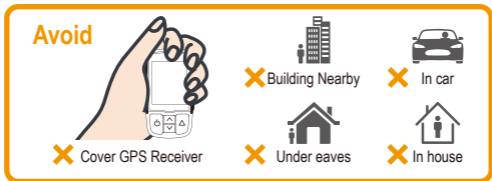

# 1. Device Overview

## ① Power/Return

Press to return the previous page or step.

## ② Up

 
Press to scroll up the menus

## ③ Down

Press to scroll down the menus

## ④ OK/Enter/Save

Press to enter the menu or start an activity or setting

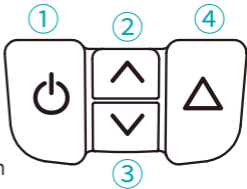

# 2. Turn ON/OFF the Device

To turn the device on, hold ① for three seconds.

To turn off the device, Use ②/③ scrolls to [POWER OFF], and press ④.

## 3. Menus

1. Press ②/③ to scroll up/down the menu.
2. Choose a selected function and press ④ to enter.



## 4. Settings

Use ②/③ to scroll to [SETTINGS], and press ④ to enter. Once in [SETTINGS], you will find following options

- **Time** - Set time Zone, toggle between 12-hour and 24-hour mode, and daylight saving <1>.
- **Shot distance** - Turn on/off the shot distance calculator.
- **Unit** - Toggle between imperial/metric units.
- **Auto Shut-off** - Auto switch off the device while not using.
- **Language** - Select your preferred language.
- **Version** - Check the device Firmware and course version number.

<1>When daylight saving is on, the time will be adjusted one hour head.

# 5. Play Golf

## 5-1 Start Playing Golf

1. Hold ① for 3 seconds to turn on the device.
2. Press ④ to enter [PLAY GOLF].



 
3. Satellites will be located automatically<2> and a list of golf courses will be shown by proximity.
4. Press ②/③ to scroll up/down, and press ④ to enter a selected golf course.

<2> Refer to [GPS Location Tips] on Page 2.

## 5-2 On The Course (HG200)

For HG200 Plus, please refer to next Page 8~9.

When playing golf, you will notice that there are eight metrics displayed on the screen. The list below explains what each of those pieces of information represents.

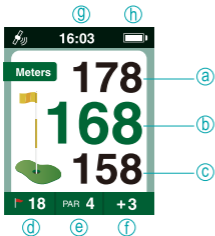


- (a) Distance to the back of green
- (b) Distance to the center of green
- (c) Distance to the front of green
- (d) Current hole number
- (e) PAR for the hole
- (f) Total Score of this round
- (g) Current time
- (h) Battery status


\* The default unit is Yard. To switch the display unit, please refer to 4. Settings

- **Press** (2)/(3) to go to next / previous hole.
- **Auto Hole:** The auto hole will trigger after the following conditions are met:  
Approach to within 30 yards of the center of the green, and then move at least 30 yards away from the center of the green.
- **Dual Green:** If the course has dual greens, hold (3) for three seconds to switch right / left green distance.

 
While in GOLF mode, follow below instructions to access Scorecard, Shot Distance, Hazard or Save this record.



 
Press ① to check hazard data.  
To return, press ① again.



 Press ④ to enter Score Card, and use ②/③ to enter your score. To save and exit, press ①.



 Hold ④ for 3 seconds to access Shot Distance.  
Travel to your ball, and the distance will be calculated. To return, press ①.




To finish the round, hold ① for 3 seconds, and then use ②/③ to select whether to save the record. And press ④ to confirm.



## 5-3 On The Course (HG200 Plus)

 For HG200, please refer to previous Page 6~7.

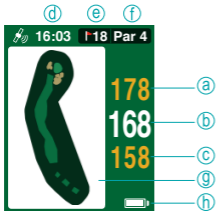


- (a) Distance to the back of green
- (b) Distance to the center of green
- (c) Distance to the front of green
- (d) Current time
- (e) Current hole number
- (f) PAR for the hole
- (g) Fairway layout
- (h) Battery status

\* The default unit is Yard. To switch the display unit, please refer to 4. Settings

- Press (2)/(3) to go to next / previous hole.
- **Auto Hole:** The auto hole will trigger after the following conditions are met:  
Approach to within 30 yards of the center of the green, and then move at least 30 yards away from the center of the green.
- **Dual Green:** If the course has dual greens, hold (3) for three seconds to switch right / left green distance.

 
While in GOLF mode, follow below instructions to check green map, access Scorecard, Shot Distance, Hazard or Save this record.




Press (1) to check hazard data.  
To return, press (1) again.



 
Press ④ to view green layout.  
To return, press ①.



 Double press ④ to enter Score Card, and use ②/③ to enter your score.  
To save and exit, press ①.



 
Hold ④ for 3 seconds to access Shot Distance.  
Travel to your ball, and the distance will be calculated. To return, press ①.



To finish the round, hold ① for 3 seconds, and then use ②/③ to select whether to save the record. And press ④ to confirm.

## 6. Score Card

 1. Use ②/③ scrolls to [SCORE CARD], and press ④ to enter.
2. Press ②/③ to scroll up/down to select a history record, and press ④ to enter and check the detail.
3. To exit, press ①

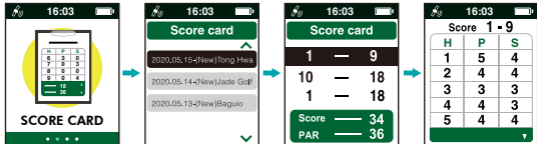

\*To delete the record, hold ④ for 3 seconds. Choose [Yes], and press ④ to confirm.


## 7. Charge the Device

The HG200/ HG200 plus takes 7-8 hours to be fully charged. To ensure optimal charging, please clean the connector and the charging pin often.

## Battery / Charging Information:

3.7V / 1600mAh, 5V / 500mA

 1. Attach the magnetic charger on the charging contacts located on the back of the device. Be sure the pins are aligned. Keep the device on a stable surface while charging.
2. Insert the USB end of the charging cord into a computer USB port or CE/FCC certified **5V 1A** output USB charger (exceeding 5V will void the warranty).
3. **Clean the charging contact port often to ensure the Charging efficiency;** if you find that the power is still low after charge or the use time is short, please wipe the charge connector of the charging cable and watch with alcohol cotton.

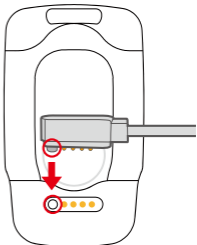

**Important Note:** If the device is charged by computer USB port, please click “Safely Remove Hardware” on the computer before removing the device.

### **⚠ CAUTION**

**AVOID** touching the magnetic end of the charging cable with metallic objects to prevent short circuits and damage to the cable.

For safety reasons, after the device is fully charged, disconnect the charging cable from USB power source.

## 8. Terms of Warranty

The products are warranted to be free from defects in materials or workmanship for 12 Months from the date of purchase. Within the period, the manufacture will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor. The customer shall be responsible for any transportation cost.

The limited warranty does not apply to

1. Cosmetic damage, such as scratches, nicks and dents.
2. Consumable parts, such as batteries, watch band/buckle, clip, iron, charging cable....etc. unless product damage has occurred due to the defect in materials or workmanship.
3. Damage to a product that has been fallen accidentally, modified or altered without written permission of the manufacturer.
4. Damage to a product that has been connected to a non-CE/FCC certified 5V 1A power supply.
5. Damage caused by failure to observe the safety instruction.

The manufacture reserves the right to refuse warranty claims against products or services that are obtained or used in contravention of the laws of any country. The device is intended to be used only as a sport or leisure aid and must not be used for any purpose requiring precise measurement of direction, distance, and location. The manufacture makes no warranty to the accuracy or completeness of the course data.

To obtain warranty service, an original or copy of the sales receipt from the retailer is required. Securely pack the device and a copy of the original sales receipt. Send the device, freight charges prepaid.

## 9. Safety Instructions

Failure to heed the following instructions could result in an accident or medical event resulting in death or serious injury.

1. There is a built-in Li-polymer battery inside. Do not expose the device to fire, explosion, or other hazard.
2. Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun or in an unattended vehicle. To prevent the possibility of damage, remove the device from the vehicle or store it out of direct sunlight.
3. Do not operate the device outside of the temperature lower than 0 or over 45 degrees Celsius (from 32° to 113°F).

4. AVOID touching the magnetic end of the charging cable with metallic objects to prevent short circuits and damage to the cable.

For safety reasons, after the device is fully charged, disconnect the charging cable from USB power source.

5. To ensure water does NOT enter the device and cause damage, please follow the instructions below :
  - Do not exposure to extreme atmospheres (i.e. hot water, saunas or steam rooms).
  - Avoid exposure to water moving with force (i.e. water running from a faucet, ocean waves or waterfalls).
  - Avoid long exposure to salt water.
  - Do not disassemble, modify, remanufacture, drop, or puncture with forces.
  - Do not remove or attempt to remove the non-user replaceable battery.
6. Do not use while driving or be in any situations or environments require concentration.
7. The device trackers rely on sensors that track your movement and other metrics. The data provided by the device is intended to be a close estimation of your activity, but may not be completely accurate.
8. Contact your local waste disposal department to dispose the device in accordance with applicable local laws and regulations.

*The content are subject to change without notice.  
For latest user manual, please visit our website.*

**CANMORE** is one of the brand names under TSKY Co., LTD (Taiwan listed company code #6784). Aims to deliver innovative GPS and sport watches and devices for sports enthusiasts. Our mission is to create and provide practical, performance-enhanced and multi-functional watches and gadgets for people who love outdoor activities.

**CANMORE** products are guaranteed to be durable, waterproof, intuitive, intelligent and safe. We create an advanced way to optimize your athletic performance.

With CANMORE, you are inspired to do more!

For **Instant Course update**, **Firmware update**, or any other **support**, please contact us via [canmore.sport@gmail.com](mailto:canmore.sport@gmail.com)

Course search



FAQ

