

CANMORE

Golf GPS Handheld User Guide



WARNING

Use ONLY USB chargers with **5V 1A** output that comply with the CE/FCC standard. Using other USB Chargers will damage the battery and void the warranty.

<http://www.canmore-sport.com/>

This manual is for the following models:



HG200 / HG200 Pro









HG200 Plus




HG500 Series

Contents

	Quick Start Guide	P 02
	<ul style="list-style-type: none">• Charge the Device• Magnetic Belt Clip• GPS Locating Tips• Update Course Map	
	User Manual	P 09
	Play Golf	P 11
	<ul style="list-style-type: none">• HG200, HG200 Pro• HG200 Plus, HG500 Series	
	Terms of Warranty	P 16
	Safety Instructions	P 17
	Contact Us	P 18

Charge the Device

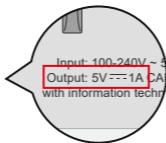

Use **ONLY** USB
chargers with
5V 1A output

Please confirm that the USB charger is approved by one or more safety standards listed below.



Important Note:

1. If the device is charged by computer USB port, please click **“Safely Remove Hardware”** on the computer before removing the device.
2. Use **ONLY** USB chargers with 5V 1A output that comply with the CE/FCC standard. Using other USB Chargers will damage the battery and void the warranty.

WARNING

1. This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, store the device out of direct sunlight.
2. For safety reasons, after the device is fully charged, disconnect the charging cable from USB power source.
3. The device will not charge when outside the temperature range of 0° to 40°C (32° to 104°F).
Please confirm that the USB charger is approved by one or more safety standards listed below.

Charge the Device - HG200/HG200 Plus


1. Attach the magnetic charger on the charging contacts located on the back of the device. Be sure the pins are aligned. Keep the device on a stable surface while charging.
2. Insert the USB end of the charging cord into a computer USB port or CE/FCC certified output USB charger (exceeding 5V will void the warranty).
3. **Clean the charging contact port often to ensure the Charging efficiency;** if you find that the power is still low after charge or the use time is short, please wipe the charge connector of the charging cable and watch with alcohol cotton.

Note:

Please charge it for at least 8 hours the first time.

WARNING

AVOID touching the magnetic end of the charging cable with metallic objects to prevent short circuits and damage to the cable. For safety reasons, after the device is fully charged, disconnect the charging cable from USB power source.

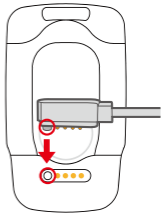

Battery / Charging Information:

3.7V / 1600mAh, 5V / 500mA

Charge the Device - HG500 Series

1. Plug the small end of the USB cable into the USB port on the device.
2. Plug the large end of the USB cable into a USB port on your computer or CE/FCC standard USB charger.
3. Charge the device completely.

Note:

- Please charge the device for at least 6 hours the first time.
- To prevent corrosion, thoroughly dry the USB port and the surrounding area before charging or connecting to a computer.

Battery / Charging Information:


3.7V / 1600mAh, 5V / 500mA



USB port

Magnetic Belt Clip

The device has a strong magnet behind to hold onto the belt clips or any metal objects, e.g. golf cart bar, golf bag metal parts. You may install the attached clip on any preferred object to hold the device.

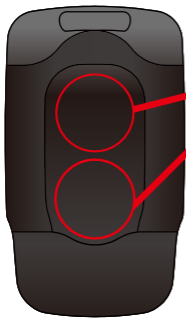

Strong Hidden Magnets
to hold the device.



Clip for
attaching the
unit to belt or
golf bag

Extra magnet for attaching
the unit to a golf cart bar tightly.



WARNING

-
- Keep out of reach of children. If swallowed, get medical help or
6. contact a Poison Control Center right away.

GPS Locating Tips

1. Acquiring the GPS signal requires an open space for best signal clearance.
2. Ensure the watch is face upright with no obstacles.
3. The initial locating will requires 60 to 120 seconds.
4. If you are unable to complete locating, press POWER to return to menu and relaunch "Play GOLF".

Correct

✓ Open Space



Avoid



✗ Cover GPS Receiver



✗ Building Nearby



✗ In car



✗ Under eaves



✗ In house

Update Course Map

**To ensure your device is equipped with the most updated course information, it is recommended to update your course data every quarter.

1. Download/ Subscribe Course Updates

- (1) Scan QR code for download link of Course Update.
- (2) Download file for your device.
- (3) Free subscription available for any new updates.



CANMORE Golf Course (Updated Bimonthly)

<http://www.canmore-sport.com/courses.html>

2. Video Reference

Learn how to update course data:



For Windows/PC



For Mac



1. Device Overview

① ⏻ Power / ←Return

- Hold to turn on the device.
- Select to return to the previous menu.

② ↑ Up


- Select to scroll through menus, holes, and settings.

③ ↓ Down

- Select to scroll through menus, holes, and settings.

④ OK / Menu

- Select to open menu and to choose menu options.

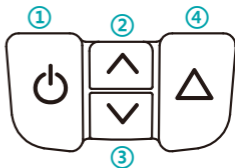

2. Turn ON/OFF the Device

Hold POWER to turn on the device.

To turn off, press UP/DOWN to find "POWER OFF", press OK to confirm action.

3. Menus

1. Press UP/DOWN to scroll up/down the menu.
2. Choose a selected function and press OK to enter.



4. Settings


Use UP/DOWN to scroll to [SETTINGS], and press OK to enter. Once in [SETTINGS], you will find following options

- **Time** - Set time Zone, toggle between 12-hour and 24-hour mode, and daylight saving <1>.
- **Shot distance** - Turn on/off the shot distance calculator.
- **Unit** - Toggle between imperial/metric units.
- **Auto Shut-off** - Auto switch off the device while not using.
- **Language** - Select your preferred language.
- **Version** - Check the device Firmware and course version number.

<1>When daylight saving is on, the time will be adjusted one hour head.

5. Score Card


1. Use UP/DOWN scrolls to [SCORE CARD], and press OK to enter.
2. Press UP/DOWN to scroll up/down to select a history record, and press OK to enter and check the detail.
3. To exit, press RETURN.

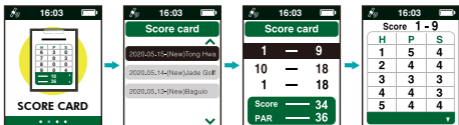

**To delete the record, hold OK for 3 seconds. Choose [Yes], and press OK to confirm.*


Play Golf

1. Press OK to enter "PLAY GOLF".
2. GPS signals will be acquired automatically, locating may take 60 to 120 seconds. List of nearby course will be exhibited once complete.
3. Press UP/DOWN to scroll, press OK to confirm course.

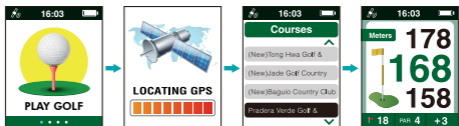

On The Course - HG200 & HG200 Pro

When playing golf, you will notice that there are eight metrics displayed on the screen. The list below explains what each of those pieces of information represents.

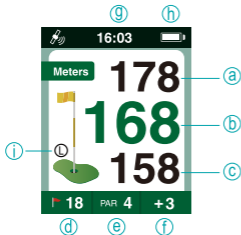


** The default unit is Yard.
To switch the display unit,
please refer to 4. Settings.*


- (a) Distance to the back of green
- (b) Distance to the center of green
- (c) Distance to the front of green
- (d) Current hole number
- (e) PAR for the hole
- (f) Total Score of this round
- (g) Current time
- (h) Battery status
- (i) Dual Green (if applicable)

- **Press UP/DOWN** to go to next / previous hole.
- **Auto Hole:** The auto hole will trigger after the following conditions are met:
Approach to within 30 yards of the center of the green, and then move at least 30 yards away from the center of the green.
- **Dual Green:** If the course has dual greens, hold **DOWN** for three seconds to switch right / left green distance.


While in GOLF mode, follow below instructions to access Scorecard, Shot Distance, Hazard or Save this record.

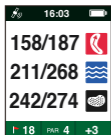


Press POWER to check hazard data.
To return, press POWER again.

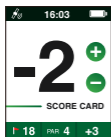

Press MENU to enter Score Card, and use UP/DOWN to enter your score. To save and exit, press POWER.

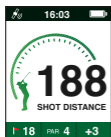


Hold MENU for 3 seconds to access Shot Distance. Travel to your ball, and the distance will be calculated. To return, press POWER.

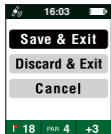

To finish the round, hold POWER for 3 seconds, and then use UP/DOWN to select whether to save the record. And press OK to confirm.

On The Course - HG200 Plus & HG500

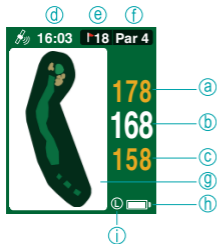


* The default unit is Yard.
To switch the display unit,
please refer to 4. Settings.

- (a) Distance to the back of green
- (b) Distance to the center of green
- (c) Distance to the front of green
- (d) Current time


- (e) Current hole number
- (f) PAR for the hole
- (g) Fairway layout
- (h) Battery status
- (i) Dual Green (if applicable)

- **Press UP/DOWN** to go to next / previous hole.
- **Auto Hole:** The auto hole will trigger after the following conditions are met:
Approach to within 30 yards of the center of the green, and then move at least 30 yards away from the center of the green.
- **Dual Green:** If the course has dual greens, hold **DOWN** for three seconds to switch right / left green distance.


While in GOLF mode, follow below instructions to check green map, access Scorecard, Shot Distance, Hazard or Save this record.

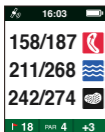


Press POWER to check hazard data.
To return, press POWER again.

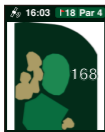


Press MENU to view green layout.
To return, press POWER.

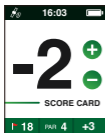

Double press MENU to enter Score Card, and
use UP/DOWN to enter your score.
To save and exit, press POWER.

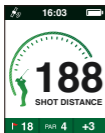

Hold MENU for 3 seconds to access Shot
Distance. Travel to your ball, and the distance will
be calculated. To return, press POWER.

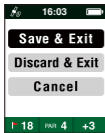

To finish the round, hold POWER for 3 seconds,
and then use UP/DOWN to select whether to
save the record. And press OK to confirm.

Terms of Warranty

The products are warranted to be free from defects in material and workmanship for 6 Months from the date of purchase. Within the warranty period, the manufacturer will, at its sole option, repair or replace any component that fails in normal operation.

Such repairs or replacements will be made at no additional cost to the customer for parts or labor. The customer shall be responsible for any transportation costs associated.

The limited warranty does not cover:

1. Cosmetic damage, such as scratches, nicks and dents.
2. Consumable parts, such as batteries, watch bands, clips, irons...etc.
Unless the product is damaged due to defects in materials or workmanship.
3. Damage to a product that has been fallen accidentally, modified or altered without written permission of the manufacturer.
4. Damage to a product that has been connected to a non-CE/FCC certified 5V power supply.
5. Damage caused by failure to observe the safety instruction.

The manufacturer reserves the right to refuse warranty claims against products or services that are obtained or used in contravention of the laws of any country. The device is intended to be used only as a sport or leisure aid and must not be used for any purpose requiring precise measurement of direction, distance, and location. The manufacturer makes no warranty to the accuracy/completeness of the course data.

To obtain warranty service, an original or copy of the sales receipt must be presented. Securely pack the device and a copy of the original sales receipt. Send the device, freight charges prepaid.

Safety Instructions

Failure to heed the following instructions may result in an accident or medical event resulting in death or serious injury.

1. The device has a built-in Li-polymer battery. Do not expose the device to fire, explosion, or other hazard.
2. Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun or in an unattended vehicle. To prevent the possibility of damage, remove the device from the vehicle or store it out of direct sunlight.
3. Do not operate the device outside of the temperature range of 0 to 45 degree Celsius (32°F to 113°F).
4. AVOID touching the magnetic end of the charging cable with metallic objects to prevent short circuits and damage to the cable. For safety reasons, after the watch is fully charged, disconnect the charging cable from the USB power source.
5. Do not use while driving or be in any situations or environments requiring concentration.
6. The device trackers rely on sensors that track your movement and other metrics. The date provided by the device is intended to be a close estimation of your activity, but may not be completely accurate.

Contact US

CANMORE is one of the brand names under TSKY Co., LTD (Taiwan listed company code #6784). Aims to deliver innovative GPS and sport watches and devices for sports enthusiasts. Our mission is to create and provide practical, performance-enhanced and multi-functional watches and gadgets for people who love outdoor activities.

CANMORE products are guaranteed to be durable, water resistant, intuitive, intelligent and safe. We create an advanced way to optimize your athletic performance. With CANMORE, you are inspired to do more!

For **Instant Course update**, **Firmware update**, or any other **support**, please contact us via canmore.sport@gmail.com

Course search



FAQ

